

## Setting Network Adapter Priority

Technical Note

March 2020

### 1. Summary

AxTraxNG server service use .NET network structure, AxTraxNG cannot determent which network adapter to use and a network adapter will automatically be assigned to the highest priority adapter on the machine in case of more than 1 network adapters available on the machine.


### 2. The Solution

To avoid the automatic assignment of network adapter to AxTraxNG server we need to set the priority (Interface metric) of each adapter on the machine. doing such should not have any effect on the daily operation of the machine.


Follow the steps in this document to set Network adapters priorities

### 3. Set Network Adapter Priority


1. From PC control Panel, Network and Internet, Network and Sharing Center select Change adapter setting:

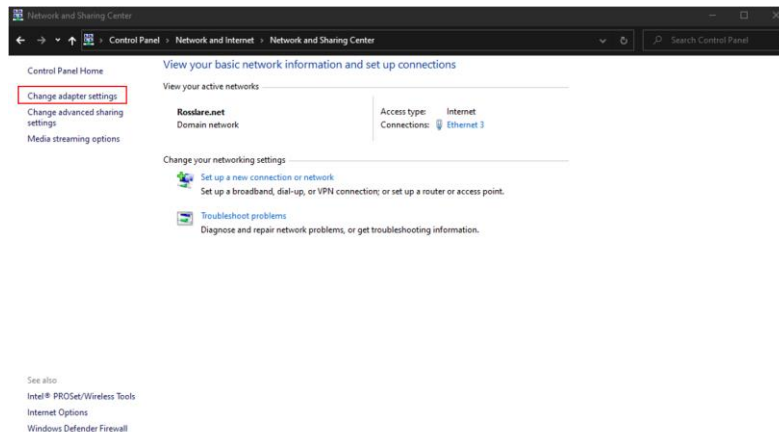


2. From the available adapter list right click the adapter to set in high priority (the adapter AxTraxNG should use) and select Properties:

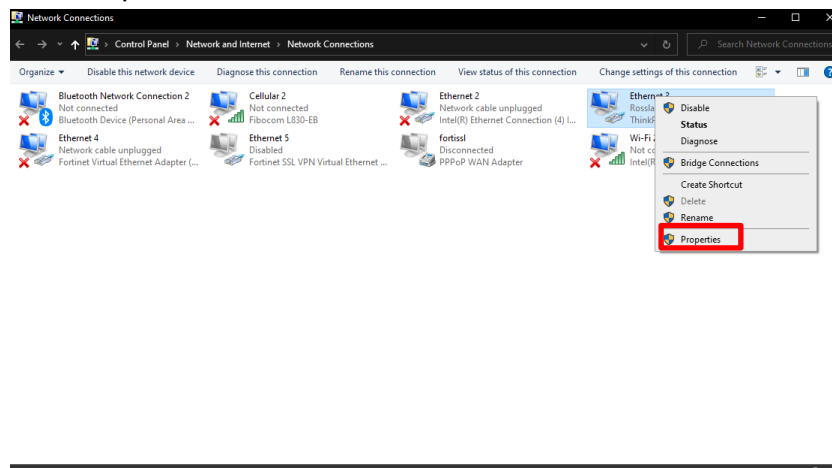


3. From the Items List select Internet Protocol Version 4 (TCP/IPv4) and click Properties:

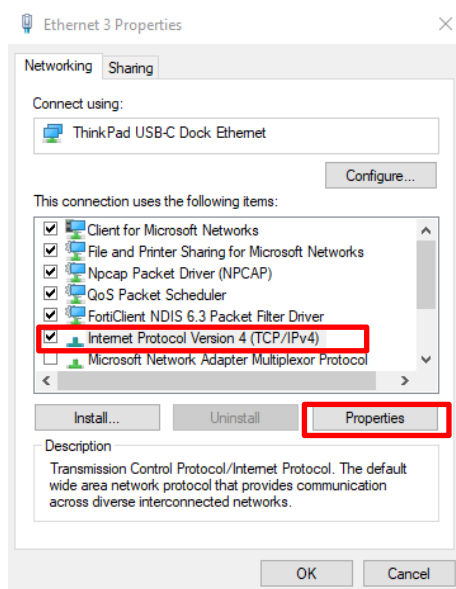

4. Under General tab Click Advanced:

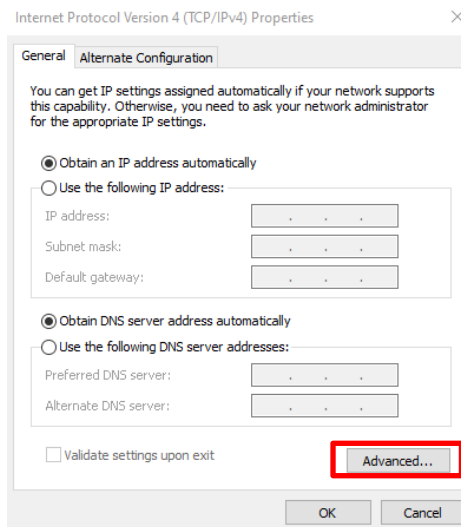

5. Under IP Setting tab remove the Check Mark from the Automatic metric and set the Interface metric to "1":

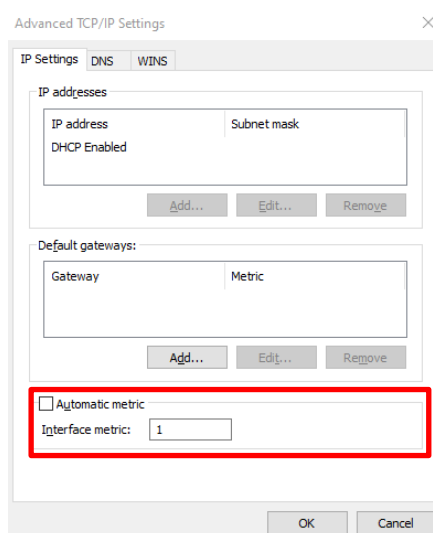

6. Repeat the same process for each adapter on the Machine and increase the Interface metric by 5 for each Adapter, the 2<sup>nd</sup> set to "6" the 3<sup>rd</sup> Set to "11" and so on.

---

## Contact Information

---

### United States and Canada

Rosslare Security Products, Inc.  
Southlake, TX, USA  
Toll Free: +1-866-632-1101  
Local: +1-817-305-0006  
Fax: +1-817-305-0069  
support.na@rosslaresecurity.com

### Europe

Rosslare Israel Ltd.  
22 Ha'Melacha St., P.O.B. 11407  
Rosh HaAyin, Israel  
Tel: +972-3-938-6838  
Fax: +972-3-938-6830  
support.eu@rosslaresecurity.com

### Latin America

Rosslare Latin America  
Buenos Aires, Argentina  
Tel: +54-11-4001-3104  
support.la@rosslaresecurity.com

### China

Rosslare Electronics (Shenzhen) Ltd.  
Shenzhen, China  
Tel: +86-755-8610-6842  
Fax: +86-755-8610-6101  
support.cn@rosslaresecurity.com

### Asia Pacific, Middle East, Africa

Rosslare Enterprises Ltd.  
Kowloon Bay, Hong Kong  
Tel: +852-2795-5630  
Fax: +852-2795-1508  
support.apac@rosslaresecurity.com

### India

Rosslare Electronics India Pvt Ltd.  
Tel/Fax: +91-20-40147830  
Mobile: +91-9975768824  
sales.in@rosslaresecurity.com



• EN ISO 13485

